

WMP-171/172

Medical Grade Panel PC

USER'S MANUAL

P/N: 205G0000WMP170, V1.4

Copyright©,2012. All rights reserved

All other brand names are registered trademarks of their respective owners.

The information contained in this document is subject to change without notice.

Version Change History

Date	Version	Description	Remark
2008/06/11	1.0	First release	James.Chiu
2008/11/25	1.1	Packing content change	James.Chiu
2009/04/13	1.2	1. Add" the best component for medical device" in title. 2. RAM support 4GB (max) 3. Touch life time as 10M times. 4. Move out GPIO sample code in appendix section	James.Chiu
2010/8/30	1.3	1. Add" smart card reader model (different configuration) 2. Add Bluetooth module as option 3. LCD spec modification 4. Touch spec modification 5. Remove PCMCIA slot 6. Add "S" version 7. Add information for 60601-1 3rd	James.Chiu
2012/7/10	1.4	1. Add UL 3rd logo 2. Modify Water/dust Resistance 3. Modify Input Voltage for Unit Volume	Cosa Huang

Acknowledgments

- Intel[®] and Core 2 Duo and Core Solo are registered trademarks of Intel[®] Corporation.
- IBM, PC/AT, PS/2 are trademarks of International Business Machines Corporation.
- Microsoft[®] Windows is a registered trademark of Microsoft[®] Corporation.
- RTL is a trademark of Realtek Semi-Conductor Co., Ltd.
- C&T is a trademark of Chips and Technologies, Inc.
- UMC is a trademark of United Microelectronics Corporation.
- ITE is a trademark of Integrated Technology Express, Inc.
- VIA is a trademark of VIA Technology, Inc.
- Award is a registered trademark of Award Software International, Inc.
- PS/2 is a trademark of International Business Machines Corporation.
- Intel is a trademark or registered trademark of Intel Corporation.
- Microsoft Windows is a registered trademark of Microsoft Corporation.
- Winbond is a registered trademark of Winbond Electronics Corporation.

All other product names or trademarks are properties of their respective owners.

FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses and can radiate radio frequency energy. If not installed and used in accordance with this user manual, it may cause harmful interference to radio communications.

Note that even when this equipment is installed and used in accordance with this user manual, there is still no guarantee that interference will not occur. If this equipment is believed to be causing harmful interference to radio or television reception, this can be determined by turning the equipment on and off. If interference is occurring, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment to a power outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Warning:

Any changes or modifications made to the equipment which are not expressly approved by the relevant standards authority could void your authority to operate the equipment.

To avoid risk of electric shock, this equipment must only be connected to a supply mains with protective earth.

Do not modify this equipment without authorization of the manufacturer.

Caution:

Danger of explosion if battery is incorrectly replaced, replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according the manufacturer's instructions.

Safety Instructions

Intended use

The WMP-171 & WMP-172 is intended to serve as a medical monitor which is designed for general purpose for hospital environment and for diagnosis. It could be used for Surgical, Radiology, PACS (Picture Archiving Communication Systems), LIS (Lab Information Systems) and Electronic Medical Record purpose. It shall not be used for life-supporting system.

WARNING: Critical diagnostic decision must not be based solely on images displayed by this device.

Greeting & Setup

Thank you for purchasing the WMP-171/172 unit. We wish that this unit will be durable and reliable in providing your medical application needs. Please follow the instructions below to ensure the unit continues to have high performance.

Unpacking

After opening the carton, there will be a Medical Panel PC unit with an accessory box. Examine the contents to see if there are damages to the unit and if all accessories are present.

Setting up

Please read this manual carefully and remember to keep this manual for future reference.

Safety Instructions & Cleaning

The unit has undergone various tests in order to comply with safety standards. Inappropriate use of the open frame unit may be dangerous. Please remember to follow the instructions below to insure your safety during the installation and operating process.

Transporting & Placement of unit

1. When moving the unit on a cart; be very cautious. Quick stops, excessive forces and uneven surfaces may cause the cart to overturn thus risking the unit to fall to the ground.

-
2. If the Medical Panel PC unit does fall to the ground, immediately turn the power off and disconnect cords. Then contact a service technician for repairs. Continual use of the unit may result cause a fire or electric shock. Also, do not repair the unit on your own.
 3. Having two or more people transporting the display unit is recommended. In addition, when installing the unit by suspending it also requires two or more people.
 4. Before suspending the unit, make sure the material used for suspension is sturdy and stable. If not properly suspended, the display unit may fall and cause serious injury to people standing nearby as well as to the unit itself.
 5. If you wish to mount the display unit, remember to use only the mounting hardware recommended by the manufacturer.

Electrical and Power Source Related

1. This Medical Panel PC unit must operate on a power source as shown on the specification label. If you are not sure what type of power supply used in the area, consult your dealer or local power supplier.
2. The power cords must not be damaged. Applied pressure, added heat, and tugging may damage the power cord.
3. The power cord must be routed properly when setup takes place. We advise that this aspect measure is to prevent people from stepping on the cords or while the unit is suspended to prevent flying objects from getting tangled with the unit.
4. Do not overload the AC outlets or extension cords. Electrical shocks or fires may occur from overloading.
5. Do not touch the power source during a thunderstorm.
6. If your hands are wet, do not touch the plug.
7. Use your thumb and index finger, grip firmly on the power cord to disconnect from the electrical socket. By pulling the power cord, may result in damaging it.

-
8. If the unit is not going to be in use for an extended period of time, remember to disconnect the unit.
 9. The Medical Panel PC unit uses voltage between 90-264VAC. Connect the unit to a power source with the same numerical value as shown. Please use only the power cord provided by the dealer to ensure safety and EMC compliance.

Various Factors of Environment

1. Do not insert objects into the openings.
2. Do not have liquids seep into the internal areas of the Medical Panel PC unit.
3. Having liquids seep in or inserting objects into the unit may result in electric shocks from taking and/or short circuiting the internal parts.
4. Do not place the Medical Panel PC unit in the presence of high moisture areas.
5. Do not install the Medical Panel PC unit in a wet environment.
6. Do not place near unit near heat generating sources.
7. Do not place the unit in a location where it will come in contact with fumes or steam.
8. Remember to keep the Medical Panel PC unit away from the presence of dust.
9. If water has flow in or seep in, immediately disconnect the open frame unit. Then contact a service technician for repairs.

Ventilation Spacing

1. Do not cover or block the openings on the top and back sides of the display unit. Inadequate ventilation may cause overheating thus reducing the lifespan of the unit.
2. Unless proper ventilation is present, do not place unit in an enclosed area; such as a built-in shelf. Keep a minimum distance of 10 cm between the display unit and wall.





Cleaning the unit

1. Remember to turn off the power source and to unplug the cord from the outlet before cleaning the unit.
2. Carefully dismount the unit or bring the unit down from suspension to clean.
3. Please use a dry soft cloth to clean the unit.
4. Take a dry cloth and wipe the unit dry. Remember to avoid having liquids seep into the internal components and areas of the Medical Panel PC unit.

Servicing, Repairing, Maintenance & Safety Checks

1. If the unit is not functioning properly, observe the performance level of the display closely to determine what type of servicing is needed.
2. Do not attempt to repair the Medical Panel PC unit on your own. Disassembling the cover exposes users' to high voltages and other dangerous conditions. Notify and request a qualified service technician for servicing the unit.
3. To avoid risk of electric shock, this equipment must only be connected to a supply mains with protective earth.
4. If any of the following situations occur turn the power source off and unplug the unit. Then contact a qualified service technician
 - (a) A liquid was spilled on the unit or objects have fallen into the unit.
 - (b) The unit is soaked with liquids.
 - (c) The unit is dropped or damaged.
 - (d) If smoke or strange odor is flowing out of the operating unit.
 - (e) If the power cord or plug is damaged.
 - (f) When the functions of the unit are dysfunctional.
5. When replacement parts are needed for the Medical Panel PC unit, make sure service technicians use replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original

parts. If unauthorized parts are used it may result in starting a fire, electrical shock and/or other dangers.

	ISO 7000-0434 : Caution, consult ACCOMPANYING DOCUMENTS.
	ISO 7000-1641 : Follow operating instructions or Consult instructions for use.
	IEC 60417 -5009 : STAND-BY.
	IEC 60417-5031 : Direct current.
	<p>EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow the guidance of your local authority, or ask the shop where you purchased the product, or if applicable, follow any agreements made between yourself.</p> <p>The mark on electrical and electronic products only applies to the current European Union Member States.</p>

When networking with electrical devices, the operator is responsible for ensuring that the resulting system meets the requirements set forth by the following standards:

– **EN 60601-1 (IEC 60601-1)**

Medical electrical equipment

Part 1: General requirements for safety

– **EN 60601-1-1 (IEC 60601-1-1)**

Medical electrical equipment

Part 1-1: General requirements for safety

Collateral standard: Safety requirements for

Medical electrical systems

– **EN 60601-1-2 (IEC 60601-1-2)**

Medical electrical equipment

Part 1-2: General requirements for safety

Collateral standard: Electromagnetic compatibility;

Requirements and tests

Accessory equipment connected to the analog and digital interfaces must be in compliance with the respective nationally harmonized IEC standards (i.e. IEC 60950 for data processing equipment, IEC 60065 for video equipment, IEC 61010-1 for laboratory equipment, and IEC 60601-1 for medical

equipment.) Furthermore all configurations shall comply with the system standard IEC 60601-1-1. Everybody who connects additional equipment to the signal input part or signal output part configures a medical system, and is therefore, responsible that the system complies with the requirements of the system standard IEC 60601-1-1. The unit is for exclusive interconnection with IEC 60601-1 certified equipment in the patient environment and IEC 60XXX certified equipment outside of the patient environment. If in doubt, consult the technical services department or your local representative.



3SZJ

E355176

With Respect To Electric Shock,
Fire And Mechanical Hazard Only In
Accordance With ANSI/AAMI ES60601-1.
CAN/CSA C22.2 No. 60601-1

Caution:

DO NOT LEAVE THIS EQUIPMENT IN AN UNCONTROLLED ENVIRONMENT WHERE THE STORAGE TEMPERATURE IS BELOW -20° C (-4° F) OR ABOVE 60° C (140° F). THIS MAY DAMAGE THE EQUIPMENT.

This equipment shall not be used in life support systems.

The user is not to touch SIP/SOPs and the patient at the same time.

Caution – Use suitable mounting apparatus to avoid risk of injury.

The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70dB (A).

A) Grounding reliability can only be achieved when the equipment is connected to an equivalent receptacle marked "Hospital Only" or "Hospital Grade".

B) Use a power cord that matches the voltage of the power outlet, which has been approved and complies with the safety standard of your particular country.

C) Caution: This adapter Sinpro MPU101-105 is a forming part of the medical device

Contact information:

3F, No.14, Prosperity Road II, Science-Based Industrial Park,
Hsinchu, Taiwan 300, R.O.C

TEL: (886) 3 5780000

E-Mail: Sales@wincomm.com.tw

Table of Contents

Acknowledgments	iii
FCC Class B	iv
Safety Instructions	v
Introduction	1
Product Description	1
Package list	2
Features	3
Specifications	4
Cleaning/Disinfecting	11
Getting Started	12
System Set Up	12
Dimension	13
System View	14
Disconnect Device	20
BIOS Setup	21
Appendix.....	39
A. Jumper settings and Connectors	39
B. VESA Mounting	48
C. Scrap Computer Recycling	50

Introduction

Product Description

The WMP-171/172 Medical Panel PC are based on Intel Core 2 Duo processor which deliver a performance improvement of more than 100 percent compared to systems running traditional single-core processors. With two cores, or computing engines, WMP-171/172 can simultaneously execute two computing tasks. It accommodates one 2.5" SATA hard disk drive and up to 4GB DDR2 SODIMM.

The high brightness LCD, Low Noise solution, integrated multimedia functions and extensive expansion options make them the perfect platform upon which to build comprehensive lifestyle computing applications.

The WMP-171/172 includes all the features of a powerful computer into a slim and attractive chassis. The WMP-171/172 has a 17" high brightness TFT display with 1280 x 1024 resolutions.

The WMP-171/172 are compact, Giga LAN and selectable WLAN network compatible PC with full safety and medical approval and features to control a dedicated system with a wide variety of applications. Combining the WMP-171/172 into your system can achieve both cost-saving and efficient improvements.

Common applications include Surgical, Radiology, PACS (Picture Archiving Communication Systems), LIS (Lab Information Systems) and Electronic Medical Record. The WMP-171/172 are definitely your perfect choices.

Package list

Before you begin installing your Medical Station, please make sure that the following items have been shipped:

- The WMP-171 or WMP-172 Medical Panel PC
- One CD containing user manual, QIG, chipset drivers
- Power Adapter x 1 (Mf:Sinpro, type/model: MPU101-105)
- Power cord – Hospital grade used(US type), or other type in UK, EU...etc.
- Touch pen x 1 (By configuration)
- Screw x 8 (VESA 75/100 use)

Features

- Intel Core 2 Duo Mobile CPU / Celeron M 550 Solution
- 17" 380 nits high brightness
- Highest performance and low power system solution
- Plastic construction with medical outlook color
- Tempered glass (optional)
- 802.11 b/g wireless LAN Module (optional)
- Bluetooth v2.1 + EDR module (optional)
- Integrated Compact Flash card reader (By configuration, optional)
- Integrated webcam solution (By configuration, optional)
- VESA 75/100 compliance Desktop Stand (optional)
- VESA 75/100 compliance Wall Mount (optional)

Specifications

Hardware Specifications

Display	17" 380 nits SXGA color TFT LCD
CPU Support	WMP-171: Intel® Core 2 Duo T7500 2.2GHz Intel® Celeron M550 2.0GHz WMP-172: Intel® Core 2 Duo Ultra Low Voltage U7500 1.06GHz Processor
Disk Drive Space	2.5" Hard Disk Drive (SATA-150)
Expansion	One Mini PCI slot; One PCI expansion, One CF card slot expansion or one Smart card slot expansion slot (By configuration, optional)
Button	Brightness: "+" / "-"; Sound: "+" / "-"; Power SW
I/O	Standard version 2 RS-232 ports + 1 RS-232/422/485 port 4 USB 2.0 ports 1 DC-in w/ lock function 1 PS/2 keyboard and 1 PS/2 mouse 2 Gigabit LAN RJ-45 Connectors <i>Sound:</i> 1 x Line-in 1 x line-out 1 x Mic-in 2 x 2W Speakers on back side 1 x PCI slot
	S version 1 RS-232 ports + 1 RS-232/422/485 port 4 USB 2.0 ports 1 DC-in w/ lock function 1 PS/2 keyboard and 1 PS/2 mouse 2 Gigabit LAN RJ-45 Connectors <i>Sound:</i> 1 x Line-in 1 x line-out 1 x Mic-in 2 x 2W Speakers on back side

LCD Specifications

Model Name	G170EG01 (V0)
Display Type	17" color TFT LCD
Max. Resolution	1280 x 1024
Contrast Ratio	1000 : 1 (Typ)
Pixel Pitch (mm)	0.264 (per one triad) x 0.264
Luminance (cd/m2)	380 (TYP)
Viewing Angle	170°(H)
	160°(V)
Operating Temperature	0°C~ 40°C (32°F~104°F)
Brightness Control	Yes

Power Adapter Specifications

Power	Close-frame
MFR	Sinpro
Type	MPU101-105
Input Voltage	AC 100 ~ 240V, 1.25 – 0.5A @ 47 ~ 63 Hz
Output Voltage	DC 12V @ 8.33A
MTBF	100,000 hrs operation at 25°C

Mechanical Specifications

Architecture	Close-frame
Front Bezel	Plastic bezel with resistive touch screen
Color	Medical-white
Mounting / Holder	VESA 75/100mm
Construction	3mm ABS + PC TYPE Plastic housing
Dimension (WxHxD)	420mmx 360mm x 83 mm
Net Weight	6.5kg
Packing Filler	PE

Environmental Specifications

Temperature	Operating: 0°C to 40°C (32°F ~104°F) Storage, Transportation: -20°C to 60°C (-4°F ~140°F)
Humidity	Operating: 10% to 90%, non-condensing Storage, Transportation: 10% to 90% @ 40°C, non-condensing

Vibration	Operating: 15g/0.53 oz, 11 ms, half sine wave Non-operating: 50g/1.76 oz, 11 ms, half sine wave
Shock	Operating: 5 ~ 17 Hz , Amplitude : 0.117 ~ 500Hz , Acceleration : 1.0G Non-operating:10~55Hz/0.15g, 55~500Hz/2.0g
Noise	WMP-171: Under 30 db at 25°C WMP-172: Fanless
Altitudes	Operational: up to 3000 m (9842 feet) Shipping: up to 12192 m (40000 feet)
Pressure	700 – 1060 hPa (Operation) 186 – 1060 hPa (Storage) 186 – 1060 hPa (Transportation)
Input Power Rating	For Adaptor: AC 100~240V, 1.25 – 0.5A, @ 47 ~ 63 Hz. For Unit: WMP-171: DC 12V, 8A WMP-172: DC 12V, 8A
Power Consumption	WMP-171: 96W Max (Typical: 79.50W) WMP-172: 96W Max (Typical: 46.50W)

Touch Screen (Optional)

Type	5-wire, Analog Resistive
Interface	USB interface
Resolution	2048 x 2048
Light Transmission	80% ± 3%
Life Time	35 million activations

Guidance and manufacturer's declaration – electromagnetic emissions

The model WMP-171 & WMP-172 is intended for use in the electromagnetic environment specified below. The customer or the user of the model WMP-171 & WMP-172 should assure that it is used in such an environment.

Emissions test	Compliance	Electromagnetic environment – guidance
----------------	------------	--

RF emissions CISPR 11		The model WMP-171 & WMP-172 uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11		The model WMP-171 & WMP-172 is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2		
Voltage fluctuations/ flicker emissions IEC 61000-3-3		

Recommended separation distances between portable and mobile RF communications equipment and the model WMP-171 & WMP-172			
The model WMP-171 & WMP-172 is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the model WMP-171 & WMP-172 can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the model WMP-171 & WMP-172 as recommended below, according to the maximum output power of the communications equipment.			
Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m		
	150 kHz to 80 MHz $d = 1,2 \sqrt{P}$	80 MHz to 800 MHz $d = 1,2 \sqrt{P}$	800 MHz to 2,5 GHz $d = 2,3 \sqrt{P}$
0,01	0,12	0,12	0,23
0,1	0,38	0,38	0,73
1	1,2	1,2	2,3
10	3,8	3,8	7,3
100	12	12	23

For transmitters rated at a maximum output power not listed above, the recommended separation distance in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.


NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Guidance and manufacturer's declaration – electromagnetic immunity

The model WMP-171 & WMP-172 is intended for use in the electromagnetic environment specified below. The customer or the user of the model WMP-171 & WMP-172 should assure that it is used in such an environment.

Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment – guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.
Electrical fast transient/burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/output lines	±2 kV for power supply lines ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1 kV line(s) to line(s) ±2 kV line(s) to earth	±1 kV line(s) to line(s) ±2 kV line(s) to earth	Mains power quality should be that of a typical commercial or hospital environment.

<p>interruptions and voltage variations on power supply input lines</p> <p>IEC 61000-4-11</p>	<p><5 % <i>UT</i> (>95 % dip in <i>UT</i>) for 0,5 cycle</p> <p>40 % <i>UT</i> (60 % dip in <i>UT</i>) for 5 cycles</p> <p>70 % <i>UT</i> (30 % dip in <i>UT</i>) for 25 cycles</p> <p><5 % <i>UT</i> (>95 % dip in <i>UT</i>) for 5 sec</p>	<p><5 % <i>UT</i> (>95 % dip in <i>UT</i>) for 0,5 cycle</p> <p>40 % <i>UT</i> (60 % dip in <i>UT</i>) for 5 cycles</p> <p>70 % <i>UT</i> (30 % dip in <i>UT</i>) for 25 cycles</p> <p><5 % <i>UT</i> (>95 % dip in <i>UT</i>) for 5 sec</p>	<p>Mains power quality should be that of a typical commercial or hospital environment. If the user of the model WMP-171 & WMP-172 requires continued operation during power mains interruptions, it is recommended that the model WMP-171 & WMP-172 be powered from an uninterruptible power supply or a battery.</p>
<p>Power frequency (50/60 Hz) magnetic field</p> <p>IEC 61000-4-8</p>	<p>3 A/m</p>	<p>3 A/m</p>	<p>Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.</p>
<p>NOTE <i>UT</i> is the a.c. mains voltage prior to application of the test level.</p>			

Guidance and manufacturer's declaration – electromagnetic immunity			
The model WMP-171 & WMP-172 is intended for use in the electromagnetic environment specified below. The customer or the user of the model WMP-171 & WMP-172 should assure that it is used in such an environment.			
Immunity	IEC 60601 test level	Compliance level	Electromagnetic environment – guidance
<p>Conducted RF IEC 61000-4-6</p> <p>Radiated RF IEC 61000-4-3</p>	<p>3 Vrms 150 kHz to 80 MHz</p> <p>3 V/m 80 MHz to 2,5 GHz</p>	<p>Vrms</p> <p>V/m</p>	<p>Portable and mobile RF communications equipment should be used no closer to any part of the model WMP-171 & WMP-172, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p>Recommended separation distance</p> $d = 1,2 \sqrt[3]{P}$ $d = 1,2 \sqrt[3]{P} \quad 80 \text{ MHz to } 800 \text{ MHz}$ $d = 2,3 \sqrt[3]{P} \quad 800 \text{ MHz to } 2,5 \text{ GHz}$ <p>where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m).</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey,^a should be less than the compliance level in each frequency range.^b</p> <p>Interference may occur in the vicinity of equipment marked with the following symbol:</p> 
NOTE 1 At 80 MHz and 800 MHz, the higher frequency range applies.			
NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.			
<p>^a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the model WMP-171 & WMP-172 is used exceeds the applicable RF compliance level above, the model WMP-171 & WMP-172 should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the model WMP-171 & WMP-172.</p> <p>^b Over the frequency range 150 kHz to 80 MHz, field strengths should be less than V/m.</p>			

Cleaning/Disinfecting

Steps:

1. Wipe the WMP-171/172 with a dry clean cloth.
2. Prepare agent per manufacturer's instructions or hospital protocol.

Cautions:

- Do not immerse or rinse the WMP-171/172 and its peripherals. If you accidentally spill liquid on the device, disconnect the unit from the power source. Contact your Biomed regarding the continued safety of the unit before placing it back in operation.
- Do not spray cleaning agent on the chassis.
- Do not use disinfectants that contain phenol.
- Do not autoclave or clean the WMP-171/172 or its peripherals with strong aromatic, chlorinated, ketone, ether, or Esther solvents, sharp tools or abrasives. Never immerse electrical connectors in water or other liquids.

Getting Started

System Set Up


The following is a summary of the steps in setting up the system for use.

- (1). You can fix the system to a mounting fixture using the screw holes on the sides of the system.
- (2). Make any required external connections such as the display, keyboard, and LAN.
- (3). Plug the appropriate end of the power cord into the power connector on the rear of the system and the plug to an electrical outlet.
- (4). Press the power switch on the front panel of the system once to turn on the system power.
- (5). If necessary, run the BIOS SETUP programs to configure the system.

Caution:

In order to boot up system from USB-CD/DVD drive, please connect USB-CD/DVD drive, turn on computer power, keep on pressing "F11" key, go into BIOS quick boot menu, select "USB-CD ROM", WAIT FOR 20 SECONDS, then press enter, system OS will boot up from USB-CD/DVD drive directly.

Dimension

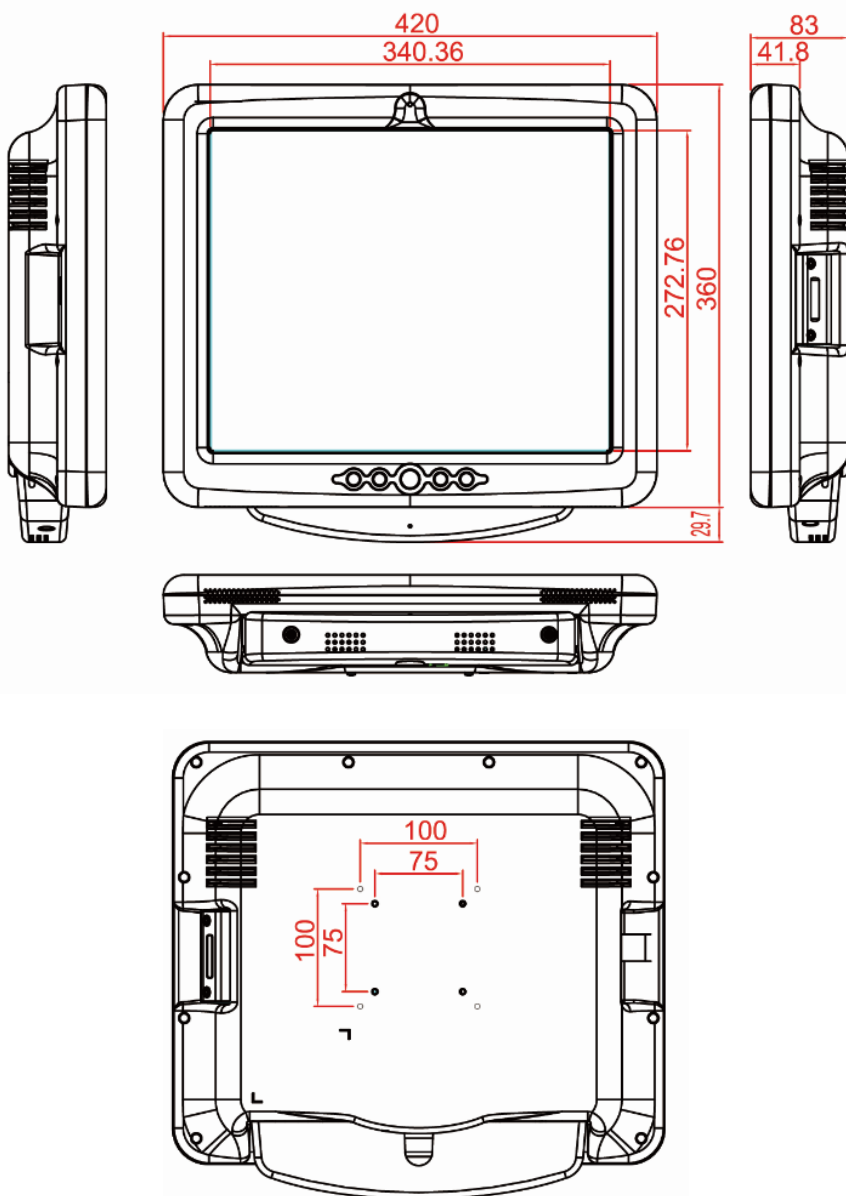

System View

Front View

Webcam (optional)



Control button at front panel


From left to right:

1. Brightness down
2. Brightness up
3. Power
4. Volume down
5. Volume up

Notice:


WMP-171S/172S models doesn't have webcam hole.

Rear View

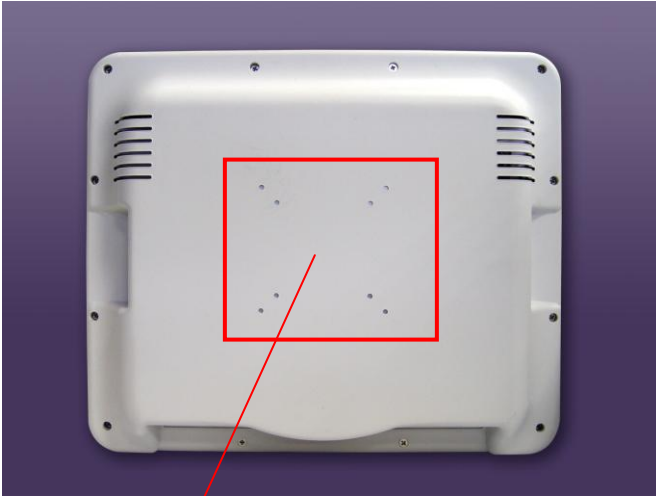


VESA 75/100

I/O parts (WMP-171/WMP-172)

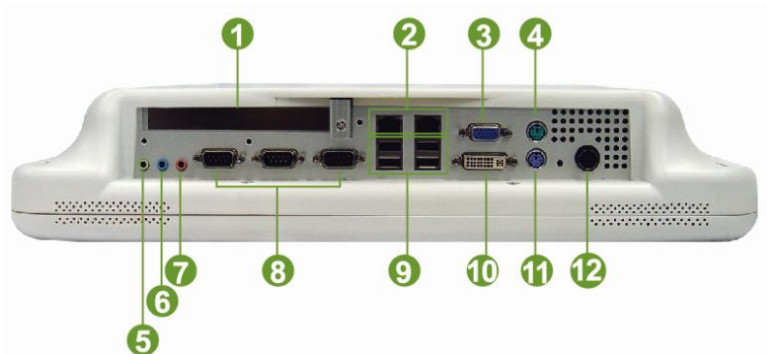


- | | |
|-------------|----------------|
| ❶ PCI Slot | ❹ USB |
| ❷ Giga LAN | ❺ DVI |
| ❸ VGA | ❻ PS2 K/B |
| ❹ PS2 Mouse | ❼ Power DC-in |
| ❺ Line-out | ❽ Rubber cover |
| ❻ Line-in | ❾ I/O cover |
| ❼ Mic | |
| ❽ RS232 | |


Side View (CF card reader model)

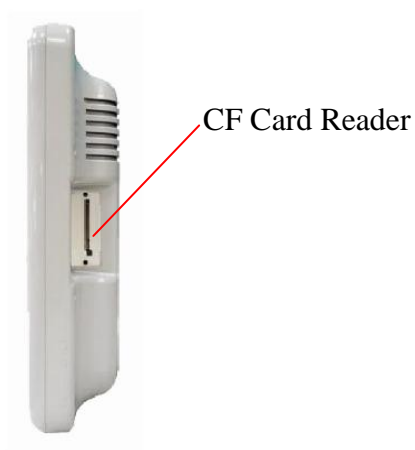

Side View (Smart card reader model)

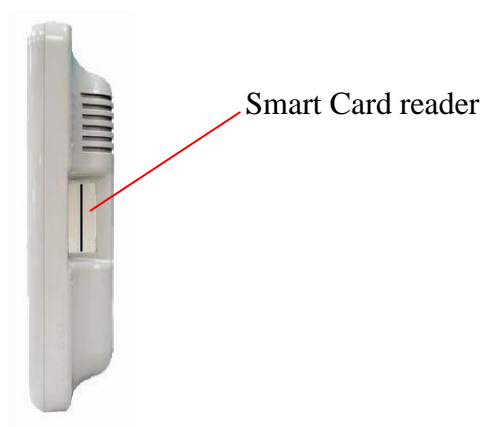

I/O parts (WMP-171S/WMP-172S)

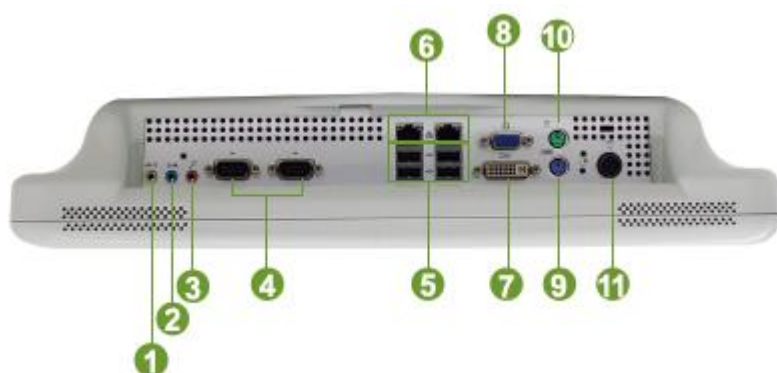

- | | |
|------------|---------------|
| ① Line-out | ⑨ PS2 K/B |
| ② Line-in | ⑩ PS2 Mouse |
| ③ Mic | ⑪ Power DC-in |
| ④ RS232 | |
| ⑤ USB | |
| ⑥ Giga LAN | |
| ⑦ DVI | |
| ⑧ VGA | |


Side View



Notice:

Compare to WMP-171/172, the WMP-171S/172S models do not have webcam hole, CF or SM card reader and PCI slot, as well as two COM ports only.

Disconnect Device

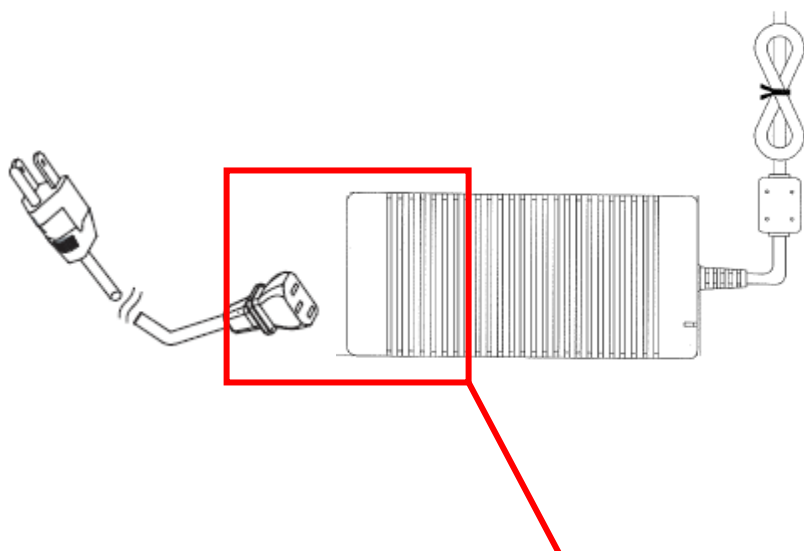

Unplug the power cord from the power adapter jack to disconnect the device.

BIOS Setup

BIOS Introduction

The Award BIOS (Basic Input/Output System) installed in your computer system's ROM supports Intel processors. The BIOS provides critical low-level support for a standard device such as disk drives, serial ports and parallel ports. It also adds virus and password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

BIOS Setup

The Award BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the Award BIOS is immediately activated. Pressing the key immediately allows you to enter the Setup utility. If you are a little bit late pressing the key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. If you still wish to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again. The following message will appear on the screen:

Press to Enter Setup

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit.

When you enter the Setup utility, the Main Menu screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

Standard CMOS Features	Load Fail-Safe Defaults
Advanced BIOS Features	Load Optimized Defaults
Advanced Chipset Features	Set Supervisor Password
Integrated Peripherals	Set User Password
Power Management Setup	Save & Exit Setup
PnP/PCI Configurations	Exit Without Saving
PC Health Status	
Ese : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type...	

Note: *If the system cannot boot after making and saving system changes with Setup, the Award BIOS supports an override to the CMOS settings that resets your system to its default.*

Warning: *It is strongly recommended that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both Award and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could cause the system to become unstable and crash in some cases.*

Standard CMOS Features

“Standard CMOS Features” choice allows you to record some basic hardware configurations in your computer system and set the system clock and error handling. If the motherboard is already installed in a working system, you will not need to select this option. You will need to run the Standard CMOS option, however, if you change your system hardware configurations, the onboard battery fails, or the configuration stored in the CMOS memory was lost or damaged.

Phoenix - Award BIOS CMOS Setup Utility		
Standard CMOS Features		
Date (mm:dd:yy)	Tue, Jan 1, 2008	Item Help
Time (hh:mm:ss)	00 : 00 : 00	Menu Level >
IDE Channel 0 Master	None	Change the day, month, Year and century
IDE Channel 0 Slave	None	
IDE Channel 2 Master	None	
IDE Channel 2 Slave	None	
IDE Channel 3 Master	None	
Video	EGA/VGA	
Halt On	All Errors	
Base Memory	640K	
Extended Memory	514048K	
Total Memory	515072K	

At the bottom of the menu are the control keys for use on this menu. If you need any help in each item field, you can press the <F1> key. It will display the relevant information to help you. The memory display at the lower right-hand side of the menu is read-only. It will adjust automatically according to the memory changed. The following describes each item of this menu.

Date

The date format is:

- Day : Sun to Sat
- Month : 1 to 12
- Date : 1 to 31
- Year : 1999 to 2099

To set the date, highlight the "Date" field and use the PageUp/PageDown or +/- keys to set the current time.

Time

The time format is: **Hour : 00 to 23**
Minute : 00 to 59
Second : 00 to 59

To set the time, highlight the "Time" field and use the <PgUp>/<PgDn> or +/- keys to set the current time.

IDE Channel Master/Slave

The onboard Serial ATA connectors provide Primary and Secondary channels for connecting up to four Serial ATA hard disks. Each channel can support up to two hard disks; the first is the "Master" and the second is the "Slave".

Press <Enter> to configure the hard disk. The selections include Auto, Manual, and None. Select 'Manual' to define the drive information manually. You will be asked to enter the following items.

Capacity : Capacity/size of the hard disk drive
Cylinder : Number of cylinders
Head : Number of read/write heads
Precomp : Write precompensation
Landing Zone : Landing zone
Sector : Number of sectors

The Access Mode selections are as follows:

CHS (HD < 528MB)
LBA (HD > 528MB and supports
Logical Block Addressing)
Large (for MS-DOS only)
Auto

Remarks: The main board supports one serial ATA ports and are represented in this setting as IDE Channel 2.

Video

This field selects the type of video display card installed in your system. You can choose the following video display cards:

EGA/VGA	For EGA, VGA, SEGA, SVGA or PGA monitor adapters. (default)
CGA 40	Power up in 40 column mode.
CGA 80	Power up in 80 column mode.
MONO	For Hercules or MDA adapters.

Halt On

This field determines whether or not the system will halt if an error is detected during power up.

All errors	Whenever the BIOS detects a non-fatal error, the system will stop and you will be prompted.
No errors	The system boot will not be halted for any error that may be detected.
All, But Keyboard	The system boot will not be halted for a keyboard error; it will stop for all other errors

Advanced BIOS Features

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Phoenix - Award BIOS CMOS Setup Utility
Advanced BIOS Features

CPU Feature	Press Enter	ITEM HELP
Hard Disk Boot Priority	Press Enter	Menu Level >
Virus Warning	Disabled	
CPU L1 and L2 Cache	Enabled	
CPU L3	Enabled	
Quick Power On Self Test	Enabled	
First Boot Device	USB-CDROM	
Second Boot Device	Hard Disk	
Third Boot Device	LAN	
Boot Other Device	Enabled	
Boot Up NumLock Status	On	
Gate A20 Option	Fast	
Typematic Rate Setting	Disabled	
Typematic Rate (Chars/Sec)	6	
Typematic Delay (Msec)	250	
Security Option	Setup	
APIC Mode	Enabled	
MPS Version Control for OS	1.4	
OS Select For DRAM>64MB	Non-OS2	
Report No FDD For WIN 95	Yes	
Full screen Logo Show	Enabled	
Small Logo (EPA) Show	Disabled	

CPU Feature

Press Enter to configure the settings relevant to CPU Feature.

Hard Disk Boot Priority

With the field, there is the option to choose, aside from the hard disks connected, "Bootable add-in Cards" which refers to other external devices.

Virus Warning

If this option is enabled, an alarm message will be displayed when trying to write on the boot sector or on the partition table on the disk, which is typical of the virus.

CPU L1 and L2 Cache

Cache memory is additional memory that is much faster than conventional DRAM (system memory). CPUs from 486-type on up contain internal cache memory, and most, but not all, modern PCs have additional (external) cache memory. When the CPU requests data, the system transfers the requested data from the main DRAM into cache memory, for even faster access by the CPU. These items allow you to enable (speed up memory access)

or disable the cache function. By default, these items are Enabled.

CPU L3 Cache

Enabled or Disabled

Quick Power On Self Test

When enabled, this field speeds up the Power On Self Test (POST) after the system is turned on. If it is set to *Enabled*, BIOS will skip some items.

First/Second/Third Boot Device

These fields determine the drive that the system searches first for an operating system. The options available include *LS120*, *Hard Disk*, *CDROM*, *ZIP100*, *USB-Floppy*, *USB-ZIP*, *USB-CDROM*, *LAN* and *Disable*.

Boot Other Device

These fields allow the system to search for an OS from other devices other than the ones selected in the First/Second/Third Boot Device.

Boot Up NumLock Status

This allows you to activate the NumLock function after you power up the system.

Gate A20 Option

This field allows you to select how Gate A20 is worked. Gate A20 is a device used to address memory above 1 MB.

Typematic Rate Setting

When disabled, continually holding down a key on your keyboard will generate only one instance. When enabled, you can set the two typematic controls listed next. By default, this field is set to ***Disabled***.

Typematic Rate (Chars/Sec)

When the typematic rate is enabled, the system registers repeated keystrokes speeds. Settings are from 6 to 30 characters per second.

Typematic Delay (Msec)

When the typematic rate is enabled, this item allows you to set the time interval for displaying the first and second characters. By default, this item is set to **250msec**.

Security Option

This field allows you to limit access to the System and Setup. The default value is **Setup**. When you select *System*, the system prompts for the User Password every time you boot up. When you select *Setup*, the system always boots up and prompts for the Supervisor Password only when the Setup utility is called up.

APIC Mode

APIC stands for Advanced Programmable Interrupt Controller. The default setting is **Enabled**.

MPS Version Control for OS

This option specifies the MPS (Multiprocessor Specification) version for your operating system. MPS version 1.4 added extended configuration tables to improve support for multiple PCI bus configurations and improve future expandability. The default setting is **1.4**.

OS Select for DRAM > 64MB

This option allows the system to access greater than 64MB of DRAM memory when used with OS/2 that depends on certain BIOS calls to access memory. The default setting is **Non-OS/2**.

Report No FDD For WIN 95

If you are using Windows 95/98 without a floppy disk drive, select Enabled to release IRQ6. This is required to pass Windows 95/98's SCT test. You should also disable the Onboard FDC Controller in the Integrated Peripherals screen when there's no floppy drive in the system. If you set this feature to Disabled, the BIOS will not report the missing floppy drive to Win95/98.

Full screen Logo Show

The screen logo appears full of the monitor screen when the system is boot up. The default setting is **Enabled**.

Small Logo (EPA) Show

The EPA logo appears at the right side of the monitor screen when the system is boot up. The default setting is **Disabled**.

Advanced Chipset Features

This Setup menu controls the configuration of the chipset.

Phoenix - Award BIOS CMOS Setup Utility		
Advanced Chipset Features		
System BIOS Cacheable	Enabled	ITEM HELP
Memory Hole at 15M-16M	Disabled	Menu Level >
PCI Express Root Port Func	Press Enter	
** VGA Setting **		
PEG/On Chip VGA Control	Auto	
* PEG Force X1	Disabled	
On-Chip Frame Buffer Size	8MB	
DVMT Mode	DVMT	
DVMT/FIXED memory Size	128MB	
Boot Display	Auto	
Panel Scaling	Auto	
Panel Number	1024x768 18 bit SC	

System BIOS Cacheable

The setting of *Enabled* allows caching of the system BIOS ROM at F000h-FFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

Memory Hole At 15M-16M

In order to improve performance, certain space in memory can be reserved for ISA cards. This memory must be mapped into the memory space below 16 MB. The choices are *Enabled* and *Disabled*.

PCI Express Root Port Func

By default.

VGA Setting

The fields under the VGA Setting and their default settings are:

- PEG/On Chip VGA Control: Onchip VGA
- On-Chip Frame Buffer Size: 8MB
- DVMT Mode: DVMT
- DVMT/Fixed Memory Size: 128MB
- Boot Display: Auto
- Panel Scaling: Auto
- Panel Number: 4

Integrated Peripherals

This section sets configurations for your hard disk and other integrated peripherals.

Phoenix - AwardBIOS CMOS Setup Utility		
Integrated Peripherals		
OnChip IDE Device	Press Enter	ITEM HELP Menu Level >
SuperIO Device	Press Enter	
Onboard LAN1 Boot ROM	Enabled	
Onboard LAN2 Boot ROM	Enabled	
Onboard Serial Port 3	280	
Serial Port 3 Use IRQ	IRQ5	
Onboard Serial Port 3	288	
Serial Port 3 Use IRQ	IRQ7	
Onboard Serial Port 3	2A0	
Serial Port 3 Use IRQ	IRQ10	
Onboard Serial Port 3	2A8	
Serial Port 3 Use IRQ	IRQ11	
USB Device Setting	Press Enter	

OnChip IDE Device

IDE HDD Block Mode

This field allows your hard disk controller to use the fast block mode to transfer data to and from your hard disk drive.

IDE DMA transfer access

This field allows your hard disk controller to use the fast block mode to transfer data to and from your hard disk drive.

On-Chip Serial ATA Setting

The fields under the SATA setting includes On-Chip Serial ATA (Auto), PATA IDE Mode (Secondary) and SATA Port (PO, P2 is Primary).

OnChip Primary/Secondary PCI IDE

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select *Enabled* to activate each channel separately.

OnChip Super IO Device

Power ON Function

This field is related to how the system is powered on – such as with the use of conventional power button, keyboard or hot keys. The default is **BUTTON ONLY**.

Onboard Serial Port

These fields allow you to select the onboard serial ports and their addresses. The default values for these ports are:

Serial Port 1	3F8/IRQ4
Serial Port 2	2F8/IRQ3

UART Mode Select

This field determines the UART 2 mode in your computer. The default value is **Normal**. Other options include *IrDA* and *ASKIR*.

PWRON After PWR-Fail

This field sets the system power status whether *on* or *off* when power returns to the system from a power failure situation.

USB Device Setting

USB 1.0 Controller

The options for this field are *Enabled* and *Disabled*. By default, this field is set to **Enabled**.

USB 2.0 Controller

The options for this field are *Enabled* and *Disabled*. By default, this field is set to **Enabled**. In order to use USB 2.0, necessary OS drivers must be installed first. **Please update your system to Windows 2000 SP4 or Windows XP SP2.**

USB Operation Mode

The options for this field are *Full/Low speed* and *High speed*. By default, this field is set to **High speed**.

USB Keyboard Function

The options for this field are *Enabled* and *Disabled*. By default, this field is set to **Enabled**.

USB Mouse Function

The options for this field are *Enabled* and *Disabled*. By default, this field is set to ***Enabled***.

USB Storage Function

The options for this field are *Enabled* and *Disabled*. By default, this field is set to ***Enabled***.

Power Management Setup

Phoenix - AwardBIOS CMOS Setup Utility
Power Management Setup

ACPI Function	Enabled	ITEM HELP
ACPI Suspend	S3(STR)	
RUN VGABIOS if S3 Resume	Auto	Menu Level >
Power Management	User Define	
Video Off Method	DPMS	
Video Off In Suspend	Yes	
Suspend Type	Stop Grant	
Modem Use IRQ	3	
Suspend Mode	Disabled	
HDD Power Down	Disabled	
Soft-Off by PWR-BTTN	Instant-Off	
Wake-Up by PCI Card	Disabled	
Power On by Ring	Disabled	
USB KB Wake-Up From S3	Disabled	
Resume by Alarm	Disabled	
Date (of Month) Alarm	0	
Time (hh:mm:ss) Alarm	0 : 0 : 0	
** Reload Global Timer Events **		
Primary IDE 0	Disabled	
Primary IDE 1	Disabled	
Secondary IDE 0	Disabled	
Secondary IDE 1	Disabled	
FDD, COM, LPT Port	Disabled	
PCI PIRQ[A-D] #	Disabled	

ACPI Function

Enable this function to support ACPI (Advance Configuration and Power Interface).

ACPI Suspend

The default setting of the ACPI Suspend mode is **S3(STR)**.

RUN VGABIOS if S3 Resume

The default setting of this field is **Auto**.

Power Management

This field allows you to select the type of power saving management modes. There are three selections for Power Management.

User Define	Each of the ranges is from 1 min. to 1hr. Except for HDD Power Down which ranges from 1 min. to 15 min.
Min. Power Saving	Minimum power management
Max. Power Saving	Maximum power management.

Video Off Method

This field defines the Video Off features. There are three options.

Blank Screen	Writes blanks to the video buffer.
V/H SYNC + Blank	Blank the screen and turn off vertical and horizontal scanning.
DPMS	Default setting, allows BIOS to control the video display.

Video Off In Suspend

When enabled, the video is off in suspend mode. The default setting is **Yes**.

Suspend Type

The default setting for the Suspend Type field is **Stop Grant**.

Modem Use IRQ

This field sets the IRQ used by the Modem. By default, the setting is **3**.

Suspend Mode

When enabled, and after the set time of system inactivity, all devices except the CPU will be shut off. By default, the setting is **Disabled**.

HDD Power Down

When enabled, and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

Soft-Off by PWR-BTTN

This field defines the power-off mode when using an ATX power supply. The *Instant Off* mode allows powering off immediately upon pressing the power button. In the *Delay 4 Sec* mode, the system powers off when the power button is pressed for more than four seconds or enters the suspend mode when pressed for less than 4 seconds.

Wake up by PCI Card

By default, this field is Enabled.

Power On by Ring

This field enables or disables the power on of the system through the modem connected to the serial port or LAN.

USB KB Wake-Up From S3

By default, this field is Disabled.

Resume by Alarm

This field enables or disables the resumption of the system operation. When enabled, the user is allowed to set the *Date* and *Time*.

Reload Global Timer Events

The HDD, FDD, COM, LPT Ports, and PCI PIRQ are I/O events that can prevent the system from entering a power saving mode or can awaken the system from such a mode. When an I/O device wants to gain the attention of the operating system, it signals this by causing an IRQ to occur. When the operating system is ready to respond to the request, it interrupts itself and performs the service.

PNP/PCI Configurations

This option configures the PCI bus system. All PCI bus systems on the system use INT#, thus all installed PCI cards must be set to this value.

Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations

		ITEM HELP
Init Display First	PCI Slot	Menu Level Select Yes if you are using a Plug and Play capable operating system Select No if you need the BIOS to configure non-boot devices
Reset Configuration Data	Disabled	
Resources Controlled By	Auto (ESCD)	
IRQ Resources	Press Enter	
PCI/VGA Palette Snoop	Disabled	
PCI Express relative items		
Maximum Payload Size	128	

Init Display First

The default setting is **Onboard**.

Reset Configuration Data

This field allows you to determine whether to reset the configuration data or not. The default value is **Disabled**.

Resources Controlled by

This PnP BIOS can configure all of the boot and compatible devices with the use of a PnP operating system such as Windows 95.

PCI/VGA Palette Snoop

Some non-standard VGA display cards may not show colors properly. This field allows you to set whether or not MPEG ISA/VESA VGA cards can work with PCI/VGA. When this field is enabled, a PCI/VGA can work with an MPEG ISA/VESA VGA card. When this field is disabled, a PCI/VGA cannot work with an MPEG ISA/VESA card.

Maximum Payload Size

The default setting of the PCI Express Maximum Payload Size is 128.

PC Health Status

This section shows the parameters in determining the PC Health Status. These parameters include temperatures, fan speeds and voltages.

Phoenix - AwardBIOS CMOS Setup Utility		
PC Health Status		
CPU Warning Temperature	Disabled	ITEM HELP
Current System Temp	45°C/113°F	Menu Level >
Current CPU1 Temp	45°C/113°F	
FAN1 Speed	0 RPM	
FAN2 Speed	5400 RPM	
FAN3 Speed	0 RPM	
FAN4 Speed	0 RPM	
Vcore	1.17V	
VIN0	3.00V	
VIN1	12.52V	
VIN2	3.53V	
VIN3	5.67V	
VIN4	0.08V	
VCC (V)	5.56V	
VBAT (V)	3.26V	
5VSB(V)	5.56V	
CPU Smart Fan Temperature	85°C/185°F	

CPU Warning Temperature

This field allows the user to set the temperature so that when the temperature is reached, the system sounds a warning. This function can help prevent damage to the system that is caused by overheating.

CPU Smart Fan Temperature

This field allows the user to set the temperature so that when the temperature is reached, the smart fan will speed up to cool the CPU temperature.

Load Fail-Safe Defaults

This option allows you to load the troubleshooting default values permanently stored in the BIOS ROM. These default settings are non-optimal and disable all high-performance features.

Load Optimized Defaults

This option allows you to load the default values to your system configuration. These default settings are optimal and enable all high performance features.

Set Supervisor Password

These two options set the system password. Supervisor Password sets a password that will be used to protect the system and Setup utility. User Password sets a password that will be used exclusively on the system. To specify a password, highlight the type you want and press <Enter>. The Enter Password: message prompts on the screen. Type the password, up to eight characters in length, and press <Enter>. The system confirms your password by asking you to type it again. After setting a password, the screen automatically returns to the main screen.

To disable a password, just press the <Enter> key when you are prompted to enter the password. A message will confirm the password to be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

Save & Exit Setup

This option allows you to determine whether or not to accept the modifications. If you type "Y", you will quit the setup utility and save all changes into the CMOS memory. If you type "N", you will return to Setup utility.

Exit Without Saving

Select this option to exit the Setup utility without saving the changes you have made in this session. Typing "Y" will quit the Setup utility without saving the modifications. Typing "N" will return you to Setup utility.

Appendix


A. Jumper settings and Connectors

This appendix gives the definitions and shows the positions of jumpers, headers and connectors. All of the configuration jumpers on WMP-171/172 are in the proper position.

Note: Some of jumpers or connectors will be removed base on system configuration.

A-1 Jumper location and list

In general, jumpers on the single board computer are used to select options for certain features. To select any option, cover the jumper cap over (SHORT) or remove (NC) it from the jumper pins according to the following instructions.

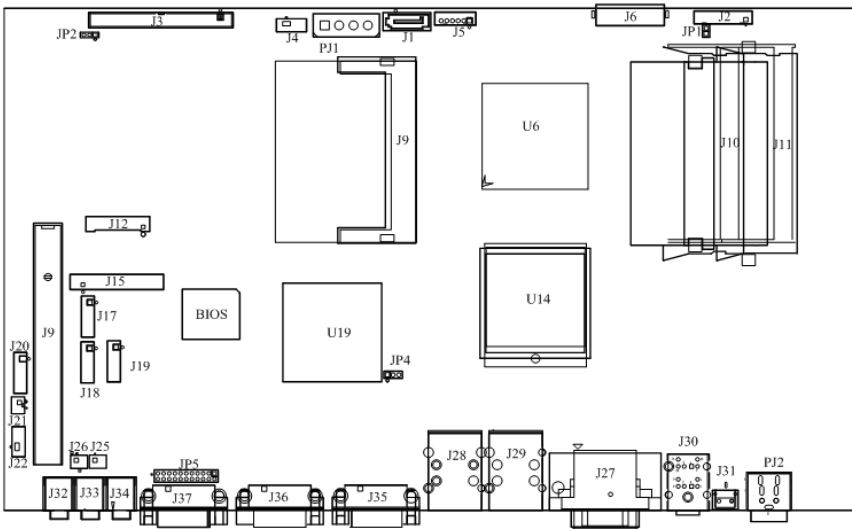

Jumper List

Connector	Function
JP1	Touch Screen Configuration
JP2	CF_CSEL#
JP4	CMOS Clear
JP5	COM1 Function Selection

JP1- Touch Screen Configuration

Description	ON(Short)	OFF(Open)
Wire	4,8 (default)	5

JP2 – CF_CSEL#

Description	Jumper Setting	Remark
<i>Slave</i>	<i>1-2</i>	
Master	2-3 (default)	

JP4 – CMOS Clear


Description	Jumper Setting	Remark
Normal	1-2(default)	
CMOS Clear	2-3	

JP5 –COM1 Function Selection


Description	Jumper Setting	Description
RS-232	5-6, 9-11, 10-12, 15-17, 16-18(default)	RS-232
RS-422	3-4, 7-9, 13-15, 14-16, 21-22	RS-422
RS-485	1-2, 7-9, 8-10, 19-20	RS-485

A-2 Connectors location and list

The connectors on the PCBA of WMP-171/172 are used to connect external devices such as hard disk drives, printers, keyboard, serial ports, etc. Specifically, the PCBA of WMP-171/172 has the following connectors:

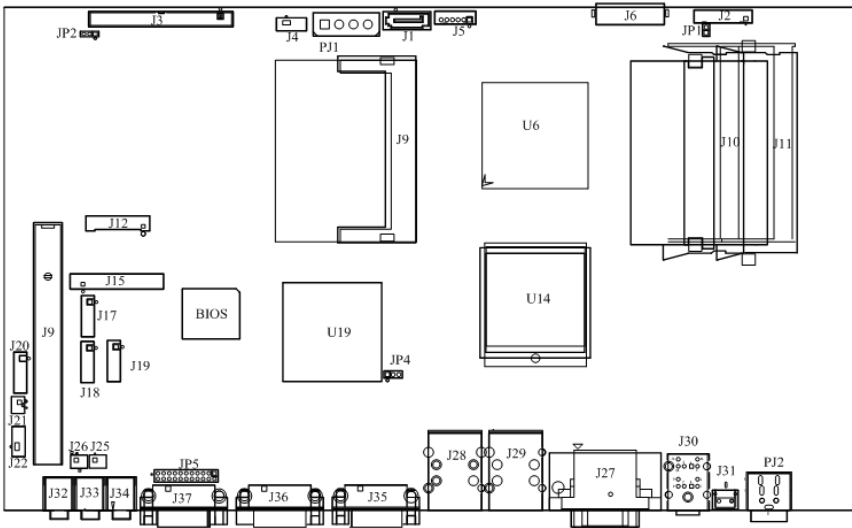


PJ2-Power Jack connector

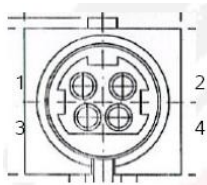


Pin #	Signal Description
1	DC In (+12V~+28V)
2	DC In (+12V~+28V)
3	Ground
4	Ground

PJ1-HDD power connector




Pin #	Signal Description
1	+12V
2	Ground
3	Ground
4	+5V

P31- Reset Button




J30 – KB+MS Connector

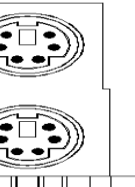


Mouse

Keyboard

J27 – Display Interface

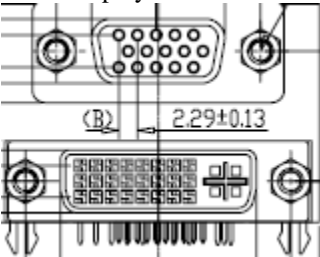

VGA-

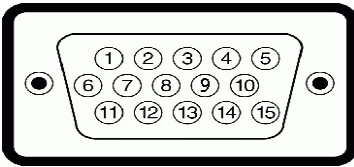


Pin #	Signal Description	Pin #	Signal Description
1	Red signal	2	Green signal
3	Blue signal	4	NC
5	GND	6	GND
7	GND	8	GND
9	DDC +5V	10	GND
11	NC	12	DDC data
13	H-sync	14	V-sync
15	DDC clock		

DVI-

Pin #	Signal Description	Pin #	Signal Description
1	TMDS Data2-	2	TMDS Data+
3	TMDS Data2 Shield	4	NC
5	NC	6	DVI DDC Clock
7	DVI DDC Data	8	
9	TMDS Data1-	10	TMDS Data1+
11	TMDS Data1 Shield	12	NC
13	NC	14	+5V
15	GND	16	Hot Plug Detect
17	TMDS Data0-	18	TMDS Data0+
19	TMDS Data0 Shield	20	CRT DDC Clock
21	CRT DDC Data	22	TMDS Clock Shield
23	TMDS Clock+	24	TMDS Clock-
V1	RED	V2	GREEN
V3	BLUE	V12	DDCDAT
V13	HSYNC	V14	VSHYNC

J28,J29 – Ethernet +USB Port

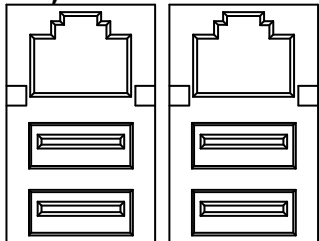

Ethernet

USB


USB

Ethernet-


Pin #	Description
1	Data0+
2	Data0-
3	Data1+
4	Data2+
5	Data2-
6	Data1-
7	Data3+
8	Data3-
LED1	LINK/ACTIVE LED
LED2	SPEED LED

USB-

Pin #	Description
1	+5V Power
2	Data -
3	Data +
4	Ground

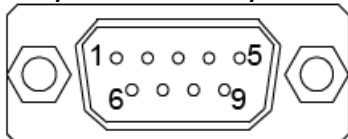
J35, J36 – COM3, COM2

Pin #	Signal Description
1	DC In (+12V~+28V)
2	DC In (+12V~+28V)
3	Ground
4	Ground

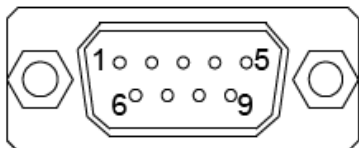J37- COM port 1(RS-232/RS-422/RS-485)

Pin#	Signal Description		
	RS-232	RS-422	RS-485
1	Carrier Detect	Transmit Data -	Transmit Data -
2	Receive Data	Transmit Data +	Transmit Data +
3	Transmit Data	Receive Data +	N/A
4	Data Terminal Ready	Receive Data -	N/A
5	Ground	Ground	Ground
6	Data Set Ready	N/A	N/A
7	Request to Send	N/A	N/A
8	Clear to Send	N/A	N/A
9	Ring Indicator	N/A	N/A

J33-Audio Line in Connector

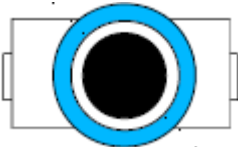


J34-Audio Microphone in Connector



J32-Audio Line out Connector




J15 – Parallel Port (internal)

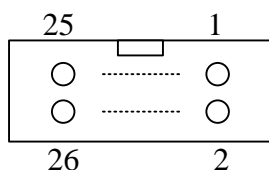


Pin #	Signal Description	Pin #	Signal Description
1	Strobe	2	Autofeed
3	Data Bit 0	4	Error
5	Data Bit 1	6	Initialize
7	Data Bit 2	8	Select In
9	Data Bit 3	10	Ground
11	Data Bit 4		Ground
13	Data Bit 5		Ground
15	Data Bit 6		Ground
17	Data Bit 7		Ground
19	Acknowledge		Ground
21	Busy		Ground
23	Paper End		Ground
25	Select		NC

J12 – GPIO Interface(internal)



Pin #	Signal Description	Pin #	Signal Description
1	GPO 1	2	GPI 1
3	GPO 2	4	GPI 2
5	GPO 3	6	GPI 3
7	GPO 4	8	GPI 4
9	GPO 5	10	GPI 5
11	GPO 6	12	GPI 6
13	GPO 7	14	GPI 7
15	GPO 8	16	GPI 8
17	+5V	18	+5V
19	Ground	20	Ground

J25, J26 – Passive Speaker Connector

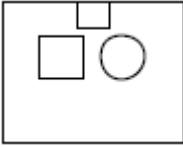

J26(Right Channel)

Pin #	Signal Description
1	AMP. Out +
2	AMP. Out -

J25(Left Channel)


Pin #	Signal Description
1	AMP. Out +
2	AMP. Out -

J3 – Standard (IDE) Connector (internal)

J9– Standard Mini-PCI Interface

J14 – Standard PCI Slot Interface

J22 – Power/HDD Indicator



Pin #	Signal Description
1	HDD Active Indicator
2	+5V
3	+5V
4	Power indicator(default)

B. VESA Mounting


The WMP-171/172 also provides standard VESA mounting to help system integrators conveniently integrate the panel PC into their system. Never use any other mounting brackets except those provided by Wincomm to prevent the unreliable fixing of WMP-171/172. VESA mount installation should be carried out by a professional technician. Please contact the service technician or your retailer if you need this service.

Installation instructions follow:

1. The wall-mounting attachment is comprised of two parts: one back bracket, and one mounting bracket.
2. First attach the back bracket to the rear cover of the WMP-171/172, securing it in place with four of the Phillips-head screws provided.
3. Attach the mounting bracket to the wall or another flat surface. The back bracket slides vertically from the top into the mounting bracket. It can be secured to the mounting bracket by screwing four of the Phillips-head screws provided through the corresponding holes at the tops of the mounting bracket.

Warning:

Be sure to secure the screws of the mounting bracket tightly. Injuries could result if the WMP-171/172 isn't properly secured to the mounting bracket.

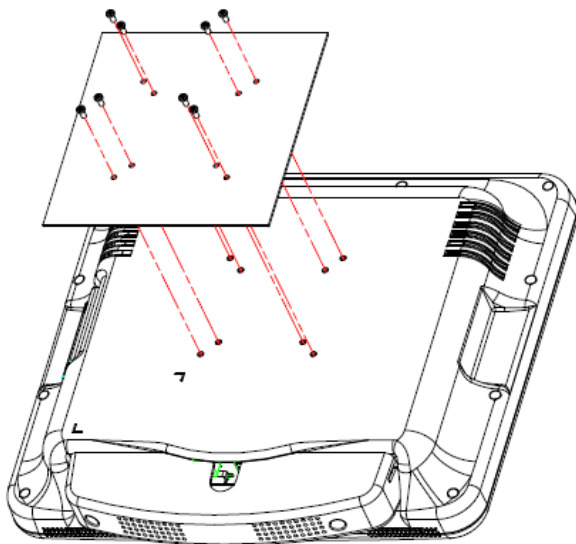

Screws: M4 x 10mm

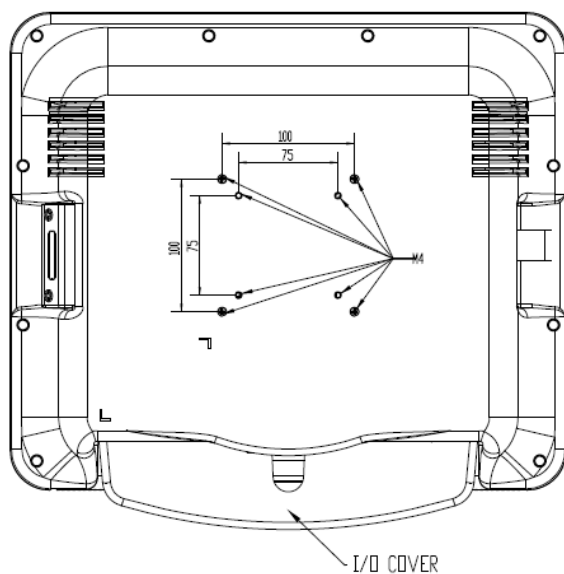


Figure B.1: VESA mounting dimension diagram (75 x 75 mm, 100 x 100 mm)

C. Scrap Computer Recycling

If the computer equipments need the maintenance or are beyond repair, we strongly recommended that you should inform us as soon as possible for the suitable solution. For the computers that are no longer useful or work well, please contact with worldwide distributors for recycling.

The worldwide distributors show on the following website:

<http://www.wincomm.com.tw/contact.aspx>

Note:

Follow the national requirement to dispose unit